

Zehnder Terraline Neo

Ciśnienie akustyczne

	Model											
	UFT 07 - 34 UFT 07 - 25 UFT 09 - 17 UFT 11 - 17 UFT 14 - 17			UFT 09 - 21 UFT 11 - 21 UFT 14 - 21 UFT 09 - 25 UFT 11 - 25 UFT 14 - 25 UFT 09 - 34 UFT 11 - 34			UFT 14 - 34					
	Wentylator Ø 30 mm			Wentylator Ø 40 mm			Wentylator Ø 60 mm					
Długość UFT	Ciśnienie akustyczne dB											
mm	Stopień pracy wentylatora			Stopień pracy wentylatora			Stopień pracy wentylatora					
	1	2	3	1	2	3	1	2	3			
800	20	22	28	21	24	33	27	34	44			
900												
1000												
1100	21	23	30	21	25	34	28	36	45			
1200												
1300												
1400												
1500	22	24	31	22	26	35	30	38	46			
1600												
1700												
1800	23	25	32	23	27	37	32	40	48			
1900												
2000												
2100												
2200	24	26	33	23	28	38	34	42	49			
2300												
2400												
2500												
2600	25	27	34	24	29	39	36	44	50			
2700												
2800												
2900	26	28	35	25	29	40	37	45	51			
3000												
3100												
3200												
3300	27	28	36	25	30	41	38	46	52			
3400												
3500												
3600	28	29	37	26	30	42	39	48	53			
3700												
3800												
3900												
4000	29	29	38	26	31	43	39	48	54			
4100												
4200												
4300	30	30	39	27	32	44	40	49	55			
4400												
4500												
4600	31	31	40	28	33	45	41	50	56			
4700												
4800												

Dla wyznaczenia ciśnienia akustycznego przyjęto korektę 8dB(A), w związku ze zjawiskiem pochłaniania dźwięku przez pomieszczenie zgodnie z normą SN EN ISO 3744:2011